



Alu Kreuz Installation Guide v1.1 (April 2016)

Part No's: EC0101-0501

Application

Audi C7 A6, A7, S6, S7, RS7
Left hand drive only

List of Parts Included

- (1) Alu Kreuz Brace
- (8) M12 bolt 60mm long C110.9
- (8) M12 Hi Strength Washer C110.9
- (5) M6 x 16mm long Cap screw
- (5) M6 Flat Washer
- (5) M6 Lock Washer
- (1) Loctite 242 tube

List of Required Tools

- Flat/Philips Head Screw Driver
- T30 Torx Socket
- M4 Allen Head Socket
- M5 Allen Head Socket
- M18 Socket
- M19 Socket
- Torque Wrench
- Pliers, Longnose

**Replacement Hardware Kits can be purchased
using PN: EC0101-0502**


Proper service and repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures and precautions (including use of safety goggles and proper tools and equipment) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety.

STEP 1

Safely raise the vehicle using an automotive lift or jack stands. Do not use ramps. The wheels of the vehicle must not have any weight on them or damage to the sub-frame may occur.

Remove the Under body cover using a Flat Head or Philips screw driver and a T30 Torx socket (3 screws).


Torx screws

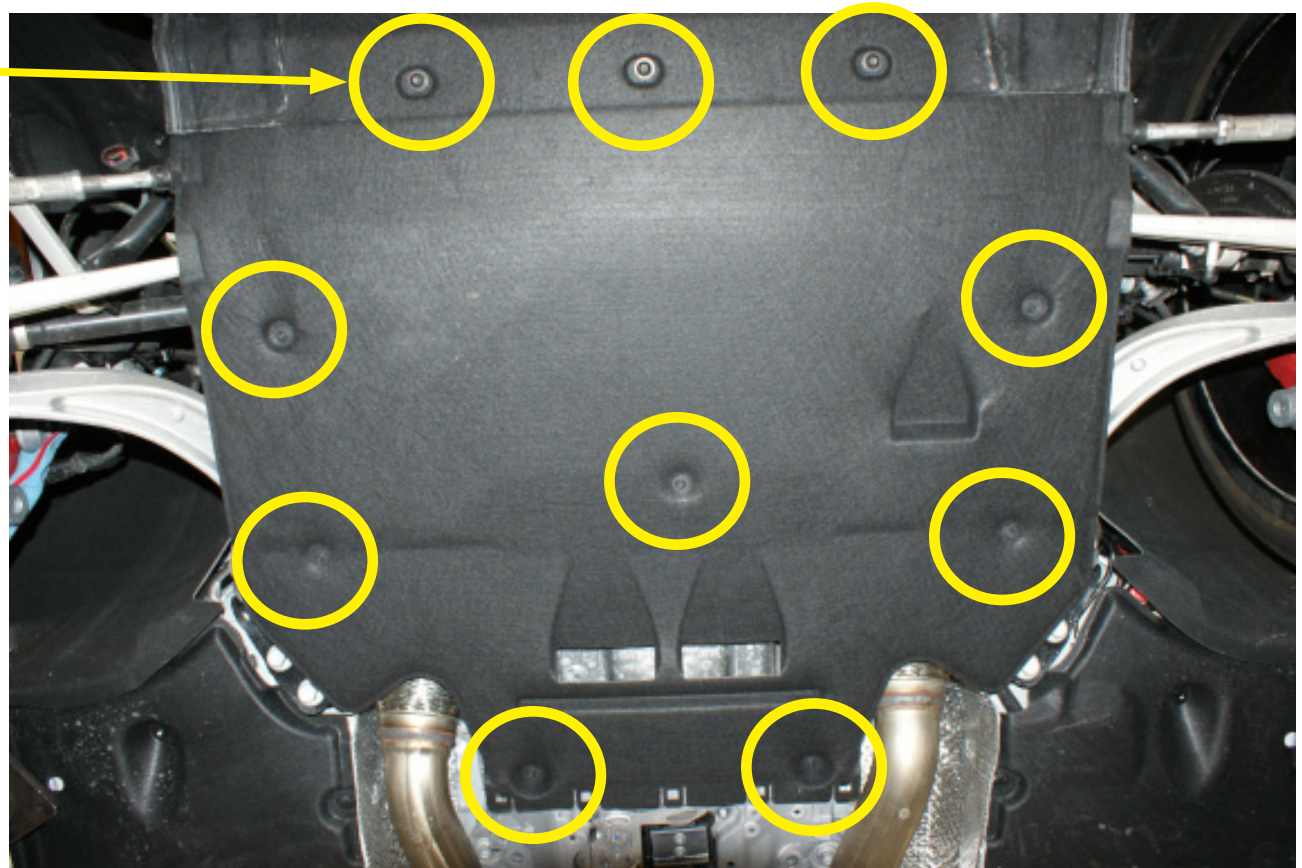

STEP

2


Carefully unclip the three cable retainers using longnose pliers.

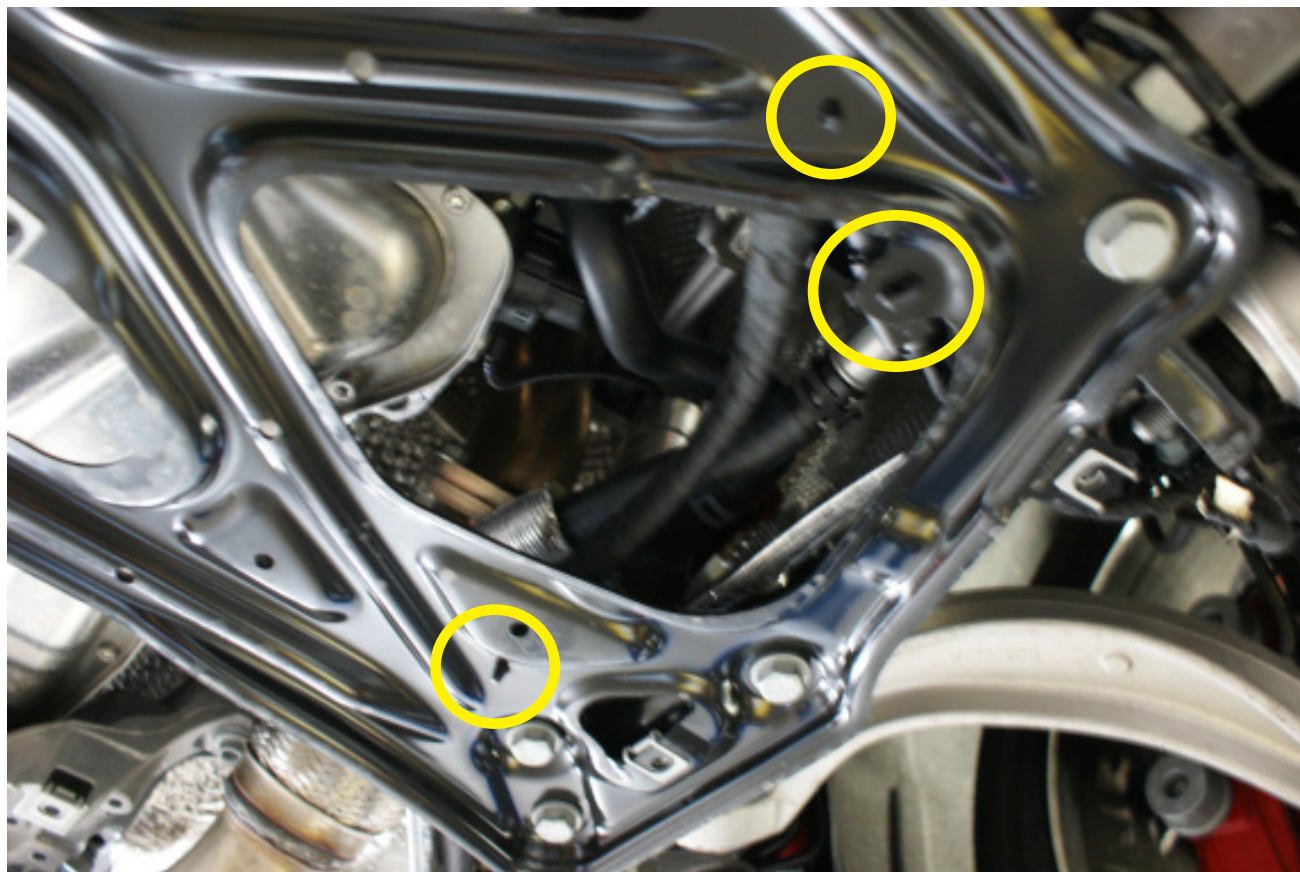

STEP

3

Remove the 8 mounting bolts of the stock brace using an M18 socket. Do not reuse these bolts.

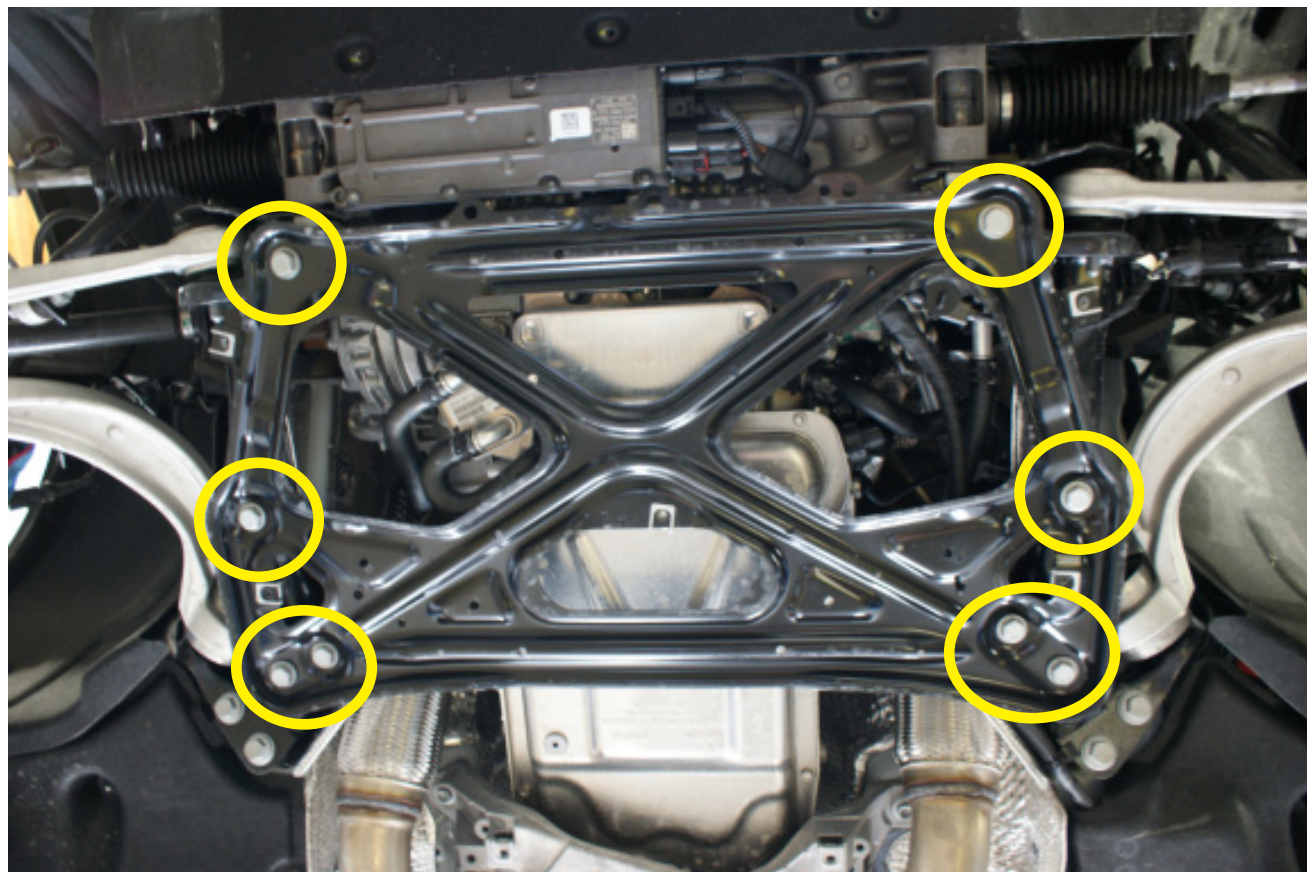


STEP

4

Install the Eurocode AluKreuz with the supplied bolts using an M19 socket. Please note that there are eight 60mm bolts included. Install these bolts with washers in the positions highlighted by the arrows. Hand tight in a criss cross order to prevent binding.


60 mm Bolts

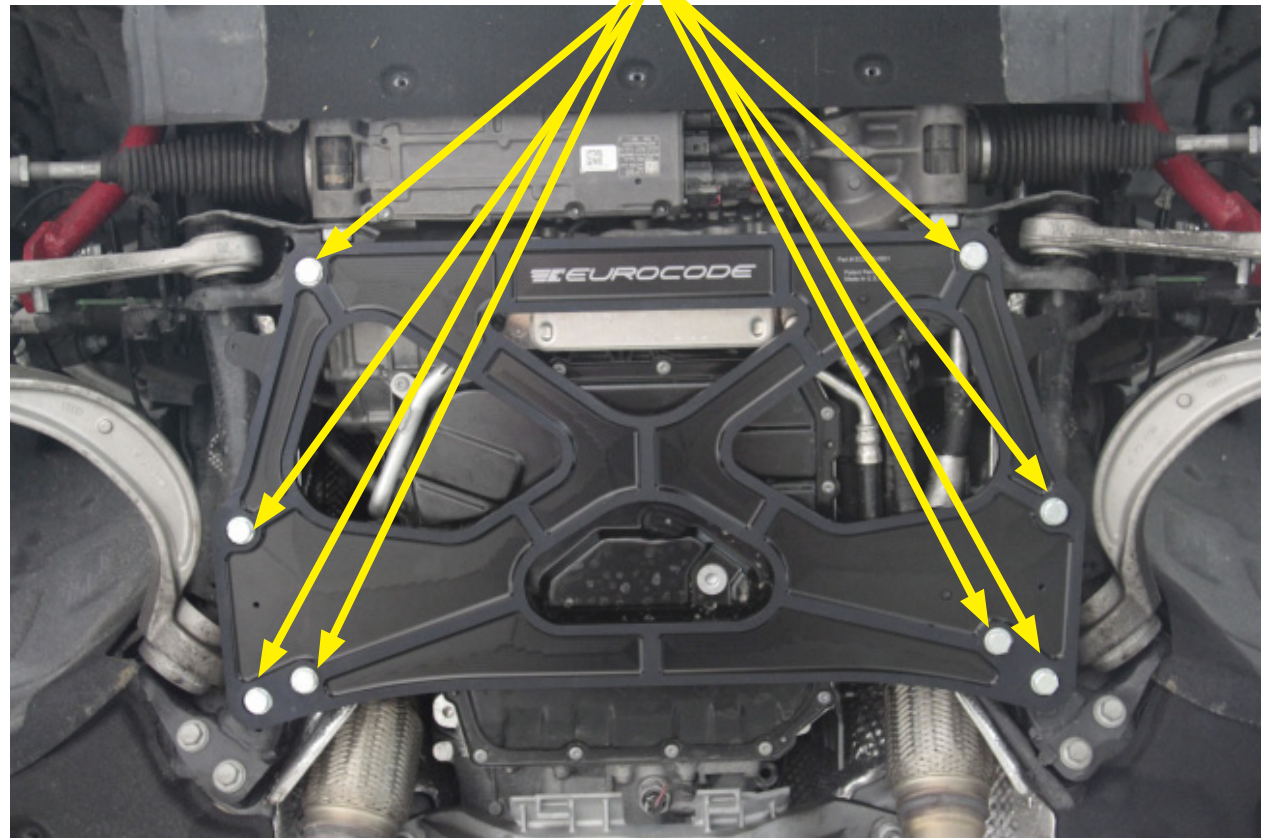

STEP

5

Torque the bolts to 66 ft-lbs (90 Nm) plus 180° (1/2 turn) torque to yield. Follow the tightening sequence as illustrated in the picture below.

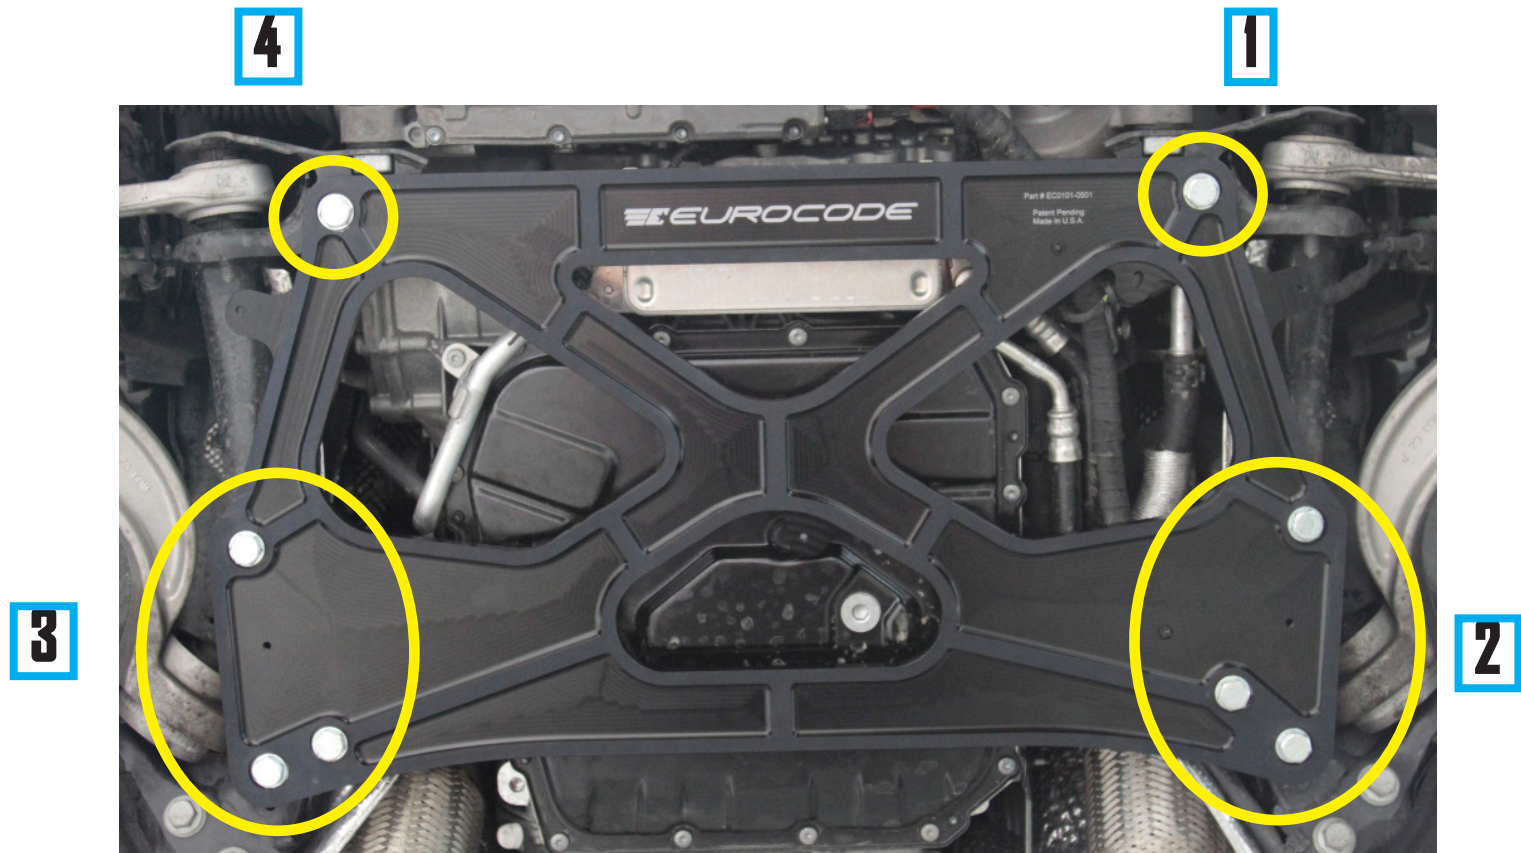

STEP


6

Install the three Cable Retaining clips from Step 2 in the corresponding positions on the Alu Kreuz.

Install the under body cover using the supplied Allen Head bolts, washers and lock washers using an M5 or an M4 allen socket. Dab a small amount of Loctite (supplied) to the threads of the bolts. Torque to 3 ft-lbs (4 Nm).

Reinstall the three OEM Torx Screws using a T30 socket. Dab a small amount of Loctite (supplied) to the threads of the screw. Torque to 5 ft-lbs (7 Nm).

At this point, installation is complete. Safely lower the vehicle and enjoy the enhanced driving pleasure.

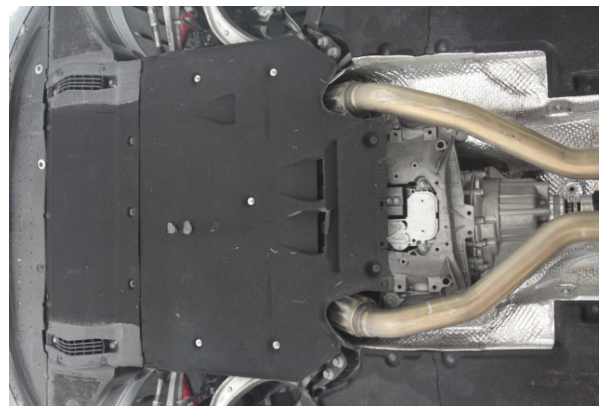

LIMITED ONE (1) YEAR WARRANTY

Eurocode Tuning, Inc. (EUROCODE) warrants to the original purchaser that our (PRODUCT) will be free of defects in material and workmanship for a period of one (1) year from the date of purchase.

This Warranty applies only to the original purchaser of the PRODUCT. To obtain any warranty service, you must provide EUROCODE with proof of purchase and date of purchase acceptable to EUROCODE, such as a copy of your purchase receipt. This warranty does not cover the removal or reinstallation of the product. EUROCODE will, at its option, repair, replace or refund the purchase price of a defective component, provided you return the defective component during the warranty period, transportation charges prepaid, to Eurocode Tuning's Service Department or a Factory Authorized Service Center.

Attach your name, address, telephone number, a description of the problem, and a copy of your sales receipt. All returns must be accompanied by a Return Goods Authorization (RGA) number and such number shall be written clearly on the outside of the box. RGA numbers may be obtained by calling EUROCODE at 1-310-294-8108 This warranty does not apply to the (i) metal finish or (ii) if the product/component has been damaged by accident, abuse, misuse, collision, modification, misapplication, improper installation, or improper service. This warranty is void if any EUROCODE serial number has been removed or defaced. Commercial or industrial use or application, or any motorsports use voids the warranty.

THE WARRANTY SET FORTH ABOVE IS THE ONLY WARRANTY. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY IMPLIED WARRANTY WHICH BY LAW MAY NOT BE EXCLUDED IS LIMITED IN DURATION TO ONE (1) YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE OF THE PRODUCT.

No EUROCODE dealer, agent or employee is authorized to make any modification, extension or addition to this warranty.

EUROCODE SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWN TIME OR LOSS OF USE) UNDER ANY LEGAL THEORY, EVEN IF EUROCODE WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion of implied warranties or the exclusion or limitation of liability for incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights. You may also have other rights that vary from state to state. EUROCODE reserves the right to change Product/component design without notice. In situations in which EUROCODE has changed a Product/component design, EUROCODE shall have no obligation to upgrade or otherwise modify previously manufactured Products/components.

Warranty inquires and Products returned for warranty service should be sent to:

Eurocode Tuning, Inc.
Customer Service Department
1872 Del Amo Blvd Unit A
Torrance, CA 90501
1-310-294-8108
1-310-212-7141 International Fax